

Firmware update of AXAGON external enclosure


After downloading the archive, extract the files e.g. to the desktop, and run the firmware

update utility called "UTHSB_MPtool_lite".


Next, follow the instructions in the pictures.

1. Everything is set up; just click the “Update Device” button.
2. Do not disconnect the enclosure from the device while the status shows “UPDATING.”
3. When the “Updating process” reaches 100% and the status shows “PASS,” you can safely disconnect the enclosure from the device.

1.

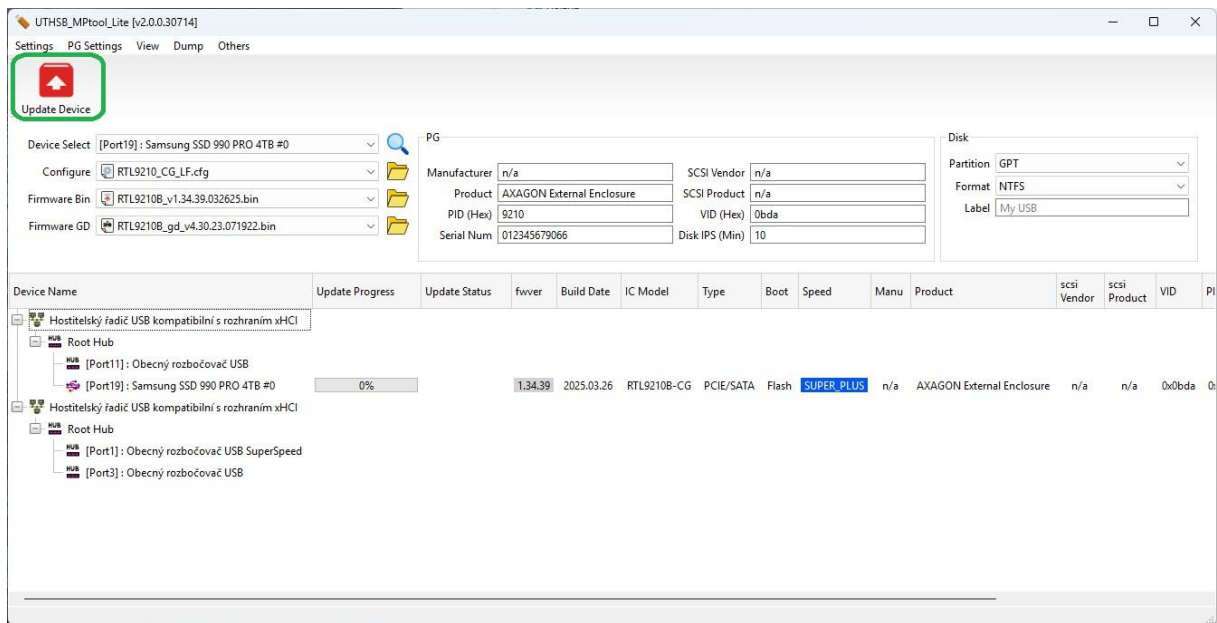

2.

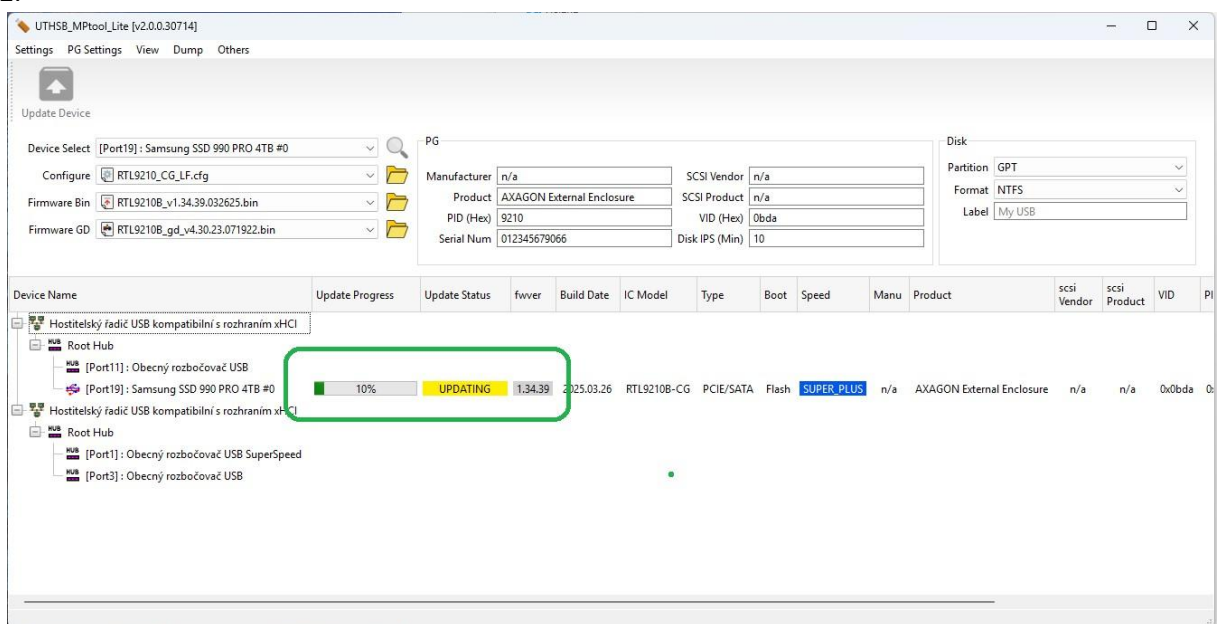

3.

