



GIGABIT ETHERNET PCI-EXPRESS CARD

EN	Instructions for use (original)	NL	Instructies voor gebruik (vertaling)
CZ	Návod k použití (originál)	PL	Instrukcja użycia (tłumaczenie)
DE	Gebrauchsanweisungen (Übersetzung)	PT	Instruções de utilização (tradução)
DK	Brugsnævning (translation)	RO	Instrucțiuni pentru utilizare (traducere)
ESP	Instrucciones de uso (traducción)	RU	Инструкция по эксплуатации (трансляция)
FIN	Käyttöohjeet (käännös)	SK	Návod na použitie (preklad)
FR	Instructions d'utilisation (traduction)	SWE	Användarinstruktioner (translation)
GR	Οδηγίες χρήσης (μετάφραση)	TR	Kullanım talimatları (tercüme)
HR	Upute za koristenje (prijevod)	BG	Инструкции за употреба (превод)
IT	Felhasználói kézikönyv (fordítás)	CN	使用说明(翻译)
NL	Istruzioni per l'uso. (traduzione)	ARA	تعليمات الاستخدام (الترجمة)

Technical specifications

INPUT INTERFACE

PCI-Express 1.1
PCI-Express 1.0a / 2.0 / 2.1 / 3.0 compatible

OUTPUT INTERFACE

Gigabit Ethernet 10/100/1000 Mb/s
RJ-45 connector
IEEE 802.3 10Base-T, IEEE 802.3u 100Base-TX, IEEE 802.3ab 1000Base-T specifications supported

SUPPORTED

Microsoft NDIS5 / NDIS6 Checksum Offload (IPv4, IPv6, TCP, UDP)
Segmentation Task-offload Large Send V1 & Large Send V2
Protocol Offload ARP & NS

IEEE 802.1P Layer 2 priority encoding & decoding

IEEE 802.1Q VLAN tagging

IEEE 802.3az Draft 3.0 EEE (Energy Efficient Ethernet), RSS (Receive-side Scaling)

full duplex with IEEE 802.3x flow control, Auto MDI/MDIX

Wake-on-LAN & remote wake-up

OS SUPPORTED

Windows XP • Vista • 7 • 8.1 • 10 & later
Windows Server 2003 • 2008 • 2012 • 2016 & later
32 & 64bit versions supported

OS X 10.4 & later

Linux 2.6.x & later

MS DOS • FreeBSD 7.x / 8.0 / 9.0

SCO Unix 5.0.6 / 5.0.7 • SCO OpenServer 6

UnixWare 7.1.x • Novell server OS 5.x / 6.x

Novell client for DOS (ODI driver)

Windows 7 • 8 • 10 & later

Windows Server 2008 • 2012 • 2016 & later

32 & 64bit versions supported

FIGURE 1.

- > Monitors
- > Network adapters
 - Realtek PCIe GBE Family Controller
- > Other devices
- > Portable Devices

1. 关闭计算机并拔下电源线。

2. 打开机箱并将卡插入空闲的 PCI-Express 插槽。

3. 关闭机壳，连接电源并打开电脑。

4. 将执行卡的自动检测和驱动器的自动安装。

5. 如果没有自动安装，请从 www.axagon.eu 下载驱动程序。安装驱动程序并重新启动计算机。

6. 如果计算机未连接到 Internet，请在智能手机或其他计算机上下载驱动程序。

然后通过 USB 驱动器进行传输。

7. 在设备管理器中，请检查驱动程序的成功安装（图 1）。

8. 将网络电缆连接到网卡。

9. 检查网卡的功能。例如：打开互联网浏览器，尝试打开任何网页。

您可以在本手册的最后一页找到更多详细信息和信息。

INFO

LED INDICATION

ORANGE LED	NO LAN
GREEN LED	DATA TRANSFER

ORANGE LED

NO LAN

GREEN LED

DATA TRANSFER



