

AXAGON



INSTRUCTIONS FOR USE

(original)
revision 1.0

HMC-6H4A

SUPERSPEED USB-C HUB with HDMI • PD and 4 USB-A

ENG Instructions for use (original)	NL Instructies voor gebruik (vertaling)
CZ Návod k použití (originál)	PL Instrukcja użycia (tłumaczenie)
DE Gebrauchsanweisungen (Übersetzung)	PT Instruções de utilização (tradução)
DK Brugsanvisning (translation)	RO Instrucțiuni pentru utilizare (traducere)
ESP Instrucciones de uso (traducción)	RU Инструкция по эксплуатации (транслация)
FIN Käyttöohjeet (käänös)	SK Návod na použitie (preklad)
FR Instructions d'utilisation (traduction)	SWE Användarinstruktioner (translation)
GR Οδηγίες χρήσης (μετάφραση)	TR Kullanım talimatları (tercüme)
HR Upute za korištenje (prijevod)	BG Инструкции за Употреба (превод)
HU Felhasználói kézikönyv (fordítás)	CN 使用说明 (翻译)
IT Istruzioni per l'uso (traduzione)	ARA تعليمات الاستخدام (الترجمة)

EN	CZ	DE	DK	ESP	FIN	FR	GR	HR	HU	IT	NL	PL	PT	RO
1. Turn on computer.	1. Zapněte počítač.	1. Schalten Sie den Rechner ein.	1. Tænd for computeren.	1. Encienda el ordenador.	1. Kytke tietokone päälle.	1. Allumez l'ordinateur.	1. Ανοίξτε τον υπολογιστή.	1. Upalite računalo.	1. Kapcsolja be a számítógépet.	1. Accendete il computer.	1. Schakel de computer in.	1. Proszę włączyć komputer.	1. Ligue o computador.	1. Porniți PC-ul.
2. Connect the hub to the PC USB port.	2. Připojte hub k USB portu PC.	2. Schließen Sie den Hub an den USB-Anschluss des PCs an.	2. Forbind hubben til Pc'ens USB port.	2. Conecte el hub al puerto USB de la PC.	2. Kytke keskitin tietokoneen USB-väylään.	2. Connectez le hub au port USB du PC.	2. Συνδέστε το καλώδιο USB στη θύρα USB του υπολογιστή.	2. Priključite hub na USB priključak računala.	2. Csatlakoztassa az hub-ot a PC USB portjához.	2. Collegare l'hub alla porta USB del PC.	2. Sluit de hub aan op de USB poort van de PC.	2. Podłącz hub do portu USB komputera PC.	2. Conecte o hub à porta USB do PC.	2. Conectați hub-ul la portul USB al PC-ului.
3. An automatic installation will be performed. No need to install any external drivers.	3. Proběhne automatická instalace. Nejsou potřeba žádné externí ovladače.	3. Es erfolgt eine automatische Installation. Es sind keine externen Treiber notwendig.	3. En automatisk installation vil blive udført. Du behøver ikke installere eksterne drivere.	3. Se procede a la instalación automática. No es necesario instalar controladores externos adicionales.	3. Automaattinen asennus suoritetaan. Ulkoisia ajureita ei tarvitse asentaa.	3. L'installation aura automatiquement lieu. Aucun pilote externe n'est nécessaire.	3. Θα εκτελεστεί μια αυτόματη εγκατάσταση. Δεν χρειάζεται να εγκαταστήσετε εξωτερικούς.	3. Plzvršit će se automatska instalacija. Nije potrebno instalirati dodatne upravljačke programe.	3. Végbemegy az automatikus telepítés. Nem szükséges semmilyen külső vezérlő.	3. Ha luogo l'installazione automatica. Non è necessario nessun driver esterno.	3. Er wordt een automatische installatie uitgevoerd. U hoeft geen externe stuurprogramma's te installeren.	3. Urządzenie zostanie zainstalowane automatycznie. Nie są potrzebne żadne sterowniki zewnętrzne.	3. Será executada uma instalação automática. Não há necessidade de instalar drivers externos.	3. Rulează instalarea automată. Nu sunt necesare niciun fel de drivere externe.
4. The hub is ready.	4. Hub je připraven.	4. Der Hub ist bereit.	4. Hubben er klar.	4. El hub está listo.	4. Keskitin on valmis käytettäväksi.	4. Le hub est prêt.	4. Ο δίκος είναι έτοιμος για χρήση.	4. Hub je spreman.	4. A hub készen áll.	4. L'hub è pronto.	4. De hub is klaar.	4. Hub jest gotowy.	4. O hub está pronto.	4. Hub-ul este gata.

RU	SK	SWE	TR	BG	CN
1. Включить компьютер.	1. Zapnite počítač.	1. Starta datorn.	1. Bilgisayarı açın.	1. Включете компютъра.	1. 打开电脑。
2. Подключите концентратор к USB-разъёму вашего компьютера.	2. Připojte hub k USB portu PC.	2. Anslut hubben till datorns USB-port.	2. Çoklayıcıyı PC USB bağlantı noktasına bağlayın.	2. Свържете хъба към USB порта на компютъра.	2. 将集线器链接到个人计算机 (PC) USB端口。
3. Происходит автоматическая установка. Не требуется никаких внешних драйверов.	3. Prebehne automatická inštalácia. Nie sú potrebné žiadne externé ovládače.	3. Automatisk installation sker. Inga drivrutiner behöver installeras.	3. Kurulum otomatik olarak başlayacaktır. Herhangi bir harici sürücü kurmanıza gerek yok.	3. Протича автоматична инсталиране. Няма нужда от никакви външни драйвери.	3. 此时将执行自动安装。这一过程中无需安装任何外部驱动程序。
4. Концентратор готов к работе.	4. Hub je pripravený.	4. Hubben är klar.	4. Çoklayıcı hazır.	4. USB хъба е готов.	4. 集线器 (hub) 已经准备好了。

ARA

1. قم بتشغيل الكمبيوتر.
2. قم بتوصيل لوحة الوصل بمنفذ USB بالكمبيوتر.
3. سيتم تنفيذ التثبيت التلقائي.
4. لا حاجة لتثبيت أي برامج تشغيل خارجية.

TECHNICAL SPECIFICATIONS

INPUT INTERFACE: USB-C

- USB 3.2 Gen 1 (USB 3.0) • USB 2.0
- 5000 • 480 • 12 • 1.5 Mbit/s (Super • High • Full • Low Speed)
- USB Type C male connector

OUTPUT INTERFACE: USB-A

- 4 USB 3.2 Gen 1 ports for data with USB Type A female connectors
- up to 2 external disks can be connected at the same time
- up to 0.5 Amp charging on USB ports

HDMI

- HDMI A female connector
- Max. resolution 4K/30Hz (4096 x 2160 @ 30Hz)
- HDCP 1.4 a 2.3 (High-bandwidth Digital Content Protection) support
- TMDS (Transition Minimized Differential Signaling) support
- 8-CH LPCM audio - compress audio (AC-3, DTS) and HBR audio format support
- Up to 192kHz / 24bit – depends on source and target device parameters i.e. notebook/phone and TV/monitor/AV receiver

*Audio + Video function requires DisplayPort Alternate Mode (DP Alt Mode) or Thunderbolt 3 compatible port + OS support

Power Delivery 3.0

- USB Type C female connector
- Notebook/phone charging through the hub
- Max power through the hub 100W (20V/5A)
- *requires device with PD power support and matching PD charger

OTHER FEATURES:

- Plug and Play & Hot Plug
- Power Delivery power / USB bus power – powered from PD charger or USB-C port

SIZE NET WEIGHT:

- 110 x 35 x 13mm & 54g
- Cable Length 20 cm

OS SUPPORTED:

- Windows 10/11, macOS, Linux, Android, Chrome OS
- * Updated OS required. Automatic driver installation – no driver needed. Correct PD and DP Alt Mode function depends on OS and device manufacturer support.



